

Anchorware Reusables

Anchorware Reusables

Anchorware® Reusables Bases and Lids



High-Performance Reusable Containers

Consumers recognize the value of these smooth, clear containers and clear, one-step “push-button” lids to store and reheat food safely. Retailers and restaurant operators benefit from repeat business when customers enjoy hot grab-n-go or microwave heat-n-eat meals and sides. Perfect for meal ingredients kits, restaurant takeout, deli, and back-of-house prep and storage. Available in rectangles, squares, and round packages from 16 to 64 ounces. Material: PP-Polypropylene #5 PP; Consumer Re-usable, Eligible for Recycling.

Anchorware



Anchorware® Reusables AW848

**8" Round Container 48 oz
Microwavable Clear Smoothwall**

**8" Round Container 48 oz
Microwavable Clear Smoothwall**



**Anchorware® Reusables
AWL6**

**7" Round Lid Microwavable Clear Flat
Push-Button Close**

Fits AW616, AW632

**7" Round Lid
Microwavable Clear Flat Push-Button Close**

Fits AW616, AW632



**Anchorware® Reusables
AW7725**

**7" Square Deep Container 25 oz
Microwavable Clear Smoothwall**

**7" Square Deep Container 25 oz
Microwavable Clear Smoothwall**



Anchorware® Reusables AW7742

**7" Square Deep Container 42 oz
Microwavable Clear Smoothwall**

**7" Square Deep Container 42 oz
Microwavable Clear Smoothwall**



Anchorware® Reusables AWL77

**7" Square Lid Microwavable Clear Flat
Push-Button Close**

Fits AW7725, AW7742

**7" Square Lid
Microwavable Clear Flat Push-Button Close**

Fits AW7725, AW7742



Anchorware® Reusables AW9595

**9.5" Square Deep Container 104 oz
Microwavable Clear Smoothwall**

**9.5" Square Deep Container 104 oz
Microwavable Clear Smoothwall**



**Anchorware® Reusables
AWL95**

**9.5" Square Lid Microwavable Clear
Flat Push-Button Close**

Fits AW9595

**9.5" Square Lid
Microwavable Clear Flat Push-Button Close**

Fits AW9595